



EYE MINI^{LITE}

Product Guide


Small Package
Big Performance



User Guide

Contents

- 01 Welcome to Uneekor
- 02 What is Included?
- 03 Safety Notice
- 04 Placing and Alignment
- 05 Quick Setup Guide
- 06 Uneekor Club Stickers
- 07 Technical Specifications
- 08 Additional Resources

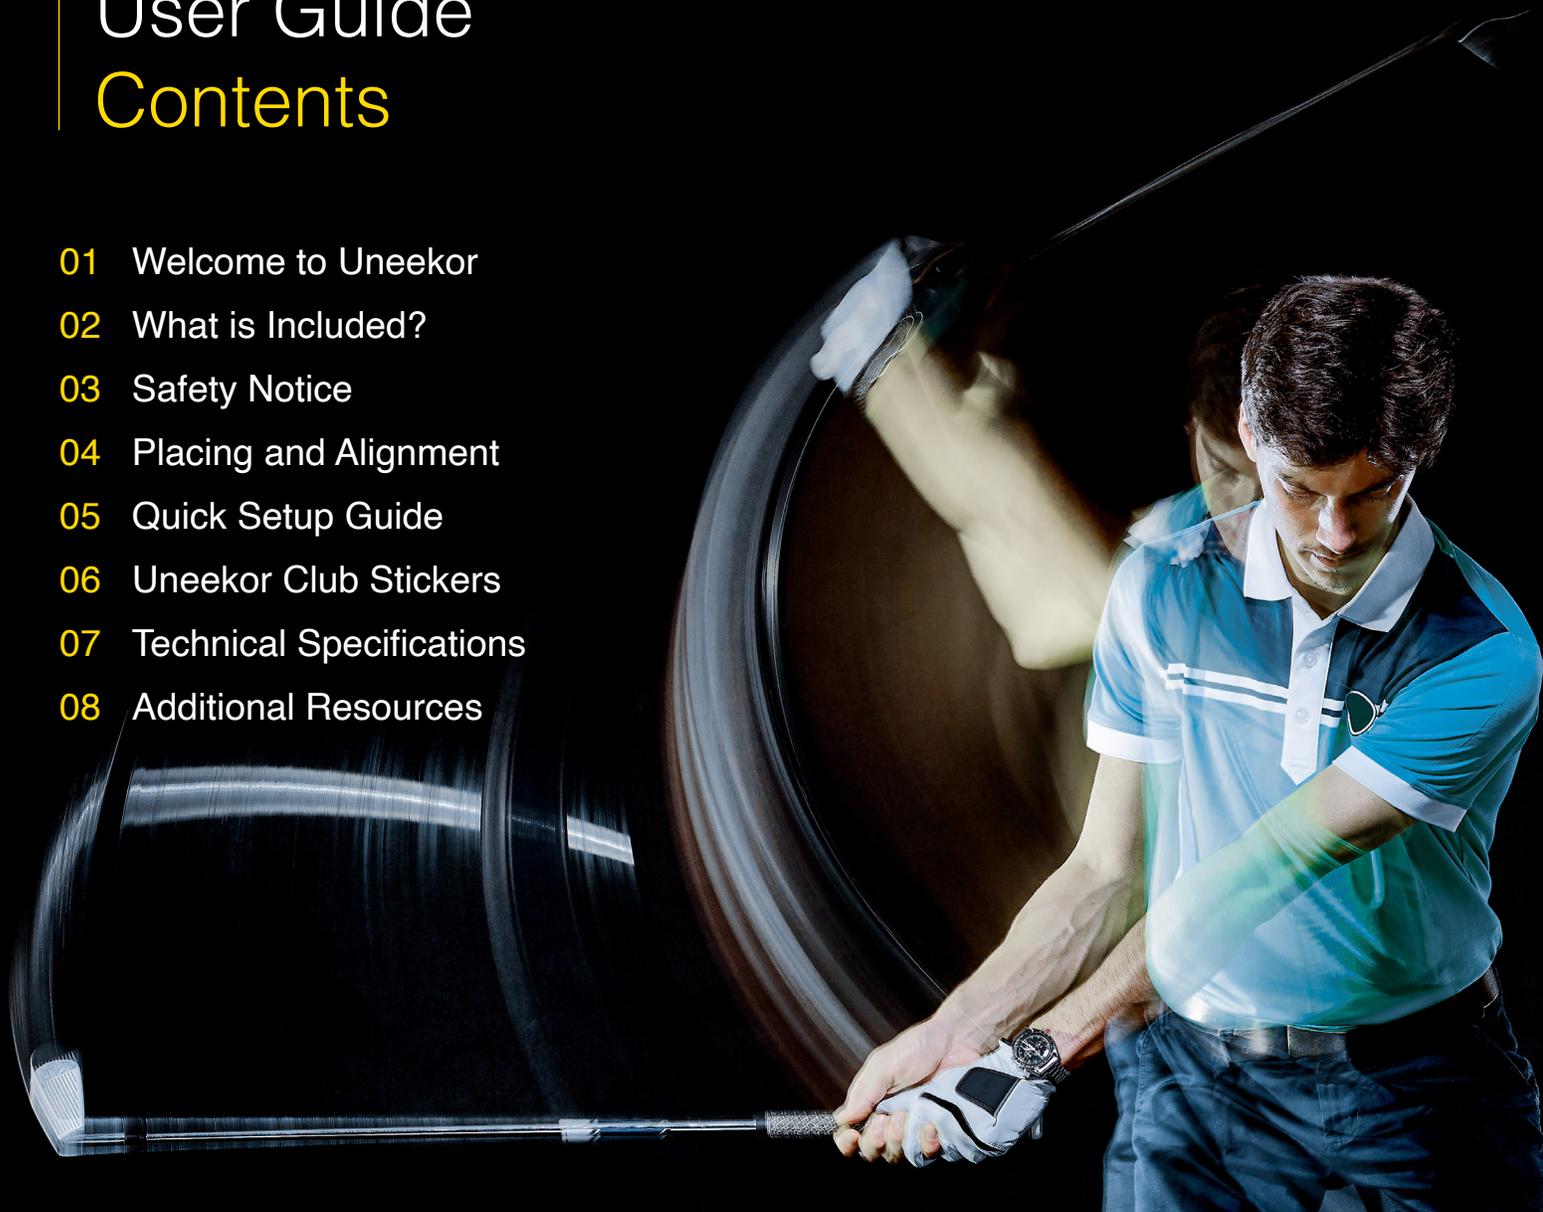

Welcome to Uneekor

Congratulations on your new Uneekor EYE MINI LITE. We are happy that you have chosen to elevate your golf game with us, and we are convinced you will enjoy your new Uneekor Launch Monitor.

The EYE MINI LITE is ready when you are. With its plug-and-play design, it's easy to get started. No fuss, just fully immersive golf simulation with instant feedback and high-performance analytics in a compact space-saving design.


FEATURES

- The EYE MINI LITE might have a small footprint, but it delivers a hugely immersive golf experience. Seamlessly fitting into any space, it delivers data without compromising on performance.
- 19 Data Points: Unlock club and ball data points and actionable insights you need to truly elevate your game. Nothing behind a paywall, just powerful data right at your fingertips.
- Dimple Optix™: Dimple Optix™ lets you play with the ball you trust and get precise ball data, thanks to our patented technology. Our advanced camera system captures the dimples of any golf ball at high frame rates, delivering unmatched accuracy. Gain clear insights into your ball's flight and spin.
- Club Optix™: This powerful visual tool captures every moment of contact and provides immediate feedback on your strike. By analyzing each shot visually, Club Optix™ helps you understand your impact in real time.




What's included in the box?

EYE MINI LITE LAUNCH MONITOR

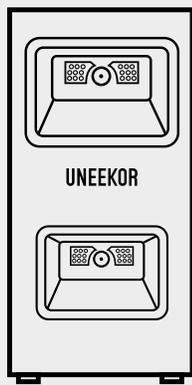


POWER CABLE (STANDARD OUTLETS, DEPENDING ON REGION)

ETHERNET CABLE (CAT 6)

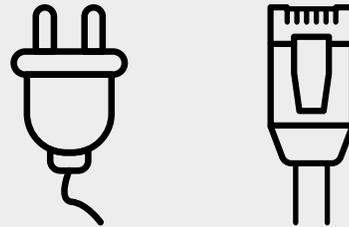

CLUB STICKERS (ONE SET / 20 SHEETS)

 

CLUB STICKER TWEEZERS



Safety Notice

READ ALL SAFETY INSTRUCTIONS BEFORE USING THIS DEVICE



THE FOLLOWING SAFETY PRECAUTIONS MUST BE OBSERVED!

- Do not install near any heat sources such as radiators, heat registers, stoves, or other sources of heat.
- Do not subject the device cables to excessive stress, heavy loads and pinching.
- Do not open, disassemble, change, or attempt to repair the device.
- Always ensure your device is free of water and powered off before storing your device. If water has entered the device, disconnect the device from external power and power off. Continued use in this state can cause fire or electric shock.
- Do not look directly into the infrared cameras when the device is turned on.
- Uneekor recommends storing your device in a cool and dry environment.
- Ensure the temperature of the storage space is not colder than 20°F (-6°C) and no warmer than 110°F (43°C).
- Do not leave your device in cold or hot temperatures for extended periods of time.

SAFETY INSTRUCTION WHEN INSTALLED

- Only use the power adapter provided with the device. Do not modify the cord in any way. If it will not fit the outlet, have a proper socket outlet installed by a qualified electrician.
- Plug the device into a 100 – 240V AC (50 – 60Hz) outlet only.
- Do not cover the device or the AC/DC adapter during use.
- This device is designed for indoor use only. The device is NOT designed for use in rain and/or outdoor environments.
- Always examine the device, the AC/DC adapter and power cord before installation and use. If the adapter or cord is damaged, it must be replaced before operating the device.
- Be aware of your surroundings and use cautiously when children and others are nearby. Swinging a club during play while others are present may result in serious injury or death.
- Ensure that your simulator space is protected against damage from ricocheting golf balls and other flying objects.

CARELESS OR IMPROPER USE MAY CAUSE SERIOUS INJURY

Safety Notice



READ ALL PRECAUTIONS BEFORE INSTALLATION.

It is essential that you fully understand and observe these precautions and warnings at all times.



CAUTION. HOT SURFACE

This device can be hot and must not be covered or touched without taking care.



WARNING! THIS DEVICE MUST BE GROUNDED

If it should malfunction or break down, grounding provides a path of least resistance for electrical current to reduce the risk of electric shock. This device's power plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local code and ordinances.



THIS DEVICE SHOULD BE USED INDOORS ONLY

Never use this device outside or in any location where exposure to water or high humidity may occur. Do not touch the device, the A/C adapter or outlet with wet hands, as this can cause fire or electric shock.

Do not use this device in environments where high humidity, smoke, or dust is present.



RISK GROUP 2

WARNING! IR emitted from this device. Do not look directly into the infrared cameras when the device is turned on.



CLEANING AND MAINTENANCE INSTRUCTIONS

UNPLUG THE ADAPTER AND LET THE DEVICE COOL DOWN FOR 10 MIN BEFORE CLEANING


The device and adapter may be cleaned using a dry cloth or a wrung-out damp cloth with lukewarm water only. Do not use strong or abrasive detergents when cleaning.

Placing & Aligning EYE MINI LITE

TARGET ALIGNMENT


For proper measurements of both swing path and club data / ball data, please ensure your EYE MINI LITE is set up and aligned parallel to your target line.

DO NOT ALIGN your EYE MINI LITE directly with your target.

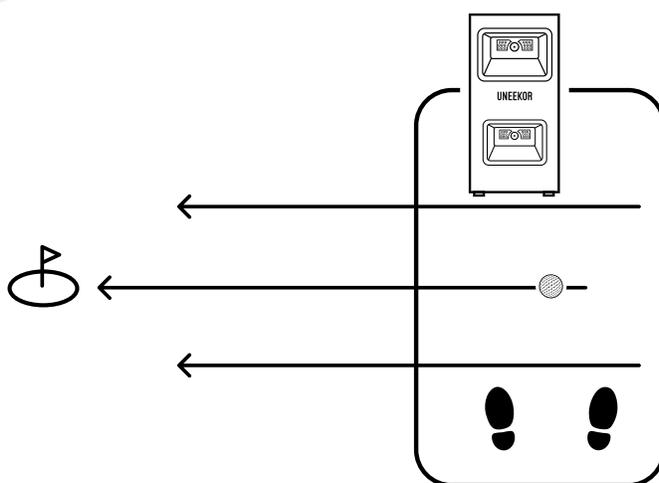

HITTING ZONE

To ensure your EYE MINI LITE reads your shots, make sure your ball is within the hitting zone. Your EYE MINI LITE will display a GREEN Uneekor logo on the front indicating that the ball is inside the hitting zone and the EYE MINI LITE is ready.

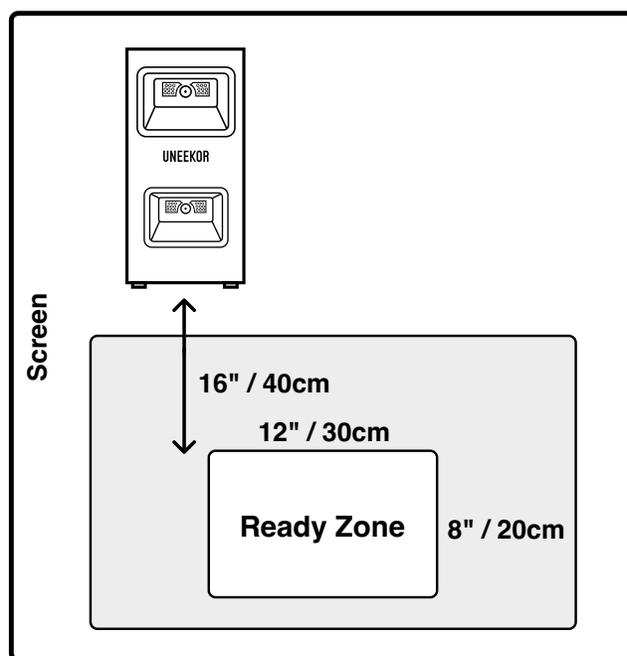


Placing & Alignment

EYE MINI LITE


LEVELLING

Ensure that your EYE MINI LITE is level with the hitting surface.

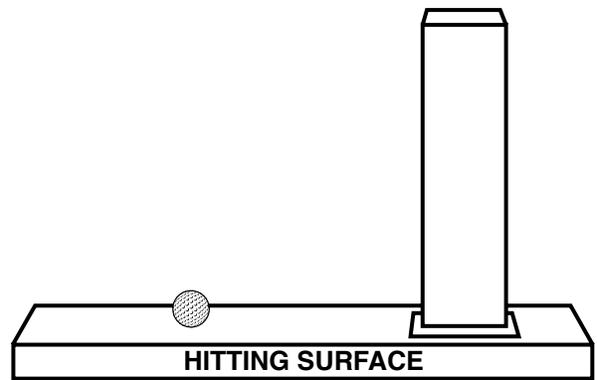

LEVELLING

While the EYE MINI LITE has a sensor that measures inclination for small adjustments, it is recommended you set up the EYE MINI LITE on a level and secure surface.

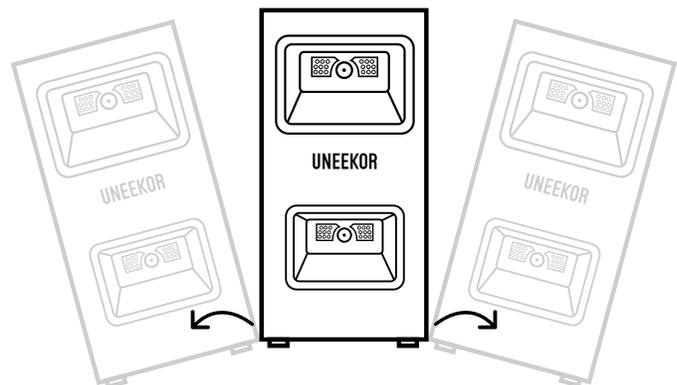

Quick Setup Guide

Please ensure that your computer meets the required specifications, and follow each step carefully, for an easy and smooth setup: <https://uneekor.com/golf-launch-monitors/eye-mini-lite?specs=sw>

Step 1

CONNECTING EYE MINI LITE (REQUIRED)

Connect the power cable to your EYE MINI LITE. Then connect the included ethernet (CAT6) cable to both the EYE MINI LITE and your Gaming PC/laptop.

Step 2

CREATE YOUR UNEEKOR ACCOUNT

Go to my.uneekor.com and create your Uneekor Account.

Step 3

INSTALL UNEEKOR LAUNCHER

[Download Uneekor Launcher](#)

Open the “Uneekor Launcher” on your Gaming PC/laptop and choose the “Install” tab in the menu bar on the left, and then select EYE MINI LITE, then continue.

Step 4

FOLLOW THE INSTALL WIZARD

Follow the Install Wizard instructions on the screen. During the installation process, you will be asked to:


- Activate your License Key (Provided in your order confirmation email).
- Calibrate your Launch Monitor and perform a Test Shot.
- Perform Software Installation.

Uneekor Club Stickers

Club stickers are required for the EYE MINI LITE to capture club data. Please see below to see how to apply the EYE MINI LITE club sticker on each type of club.


DRIVER

Place the sticker 1 inch from the edge of the toe and 5 grooves up for drivers with 8 grooves. For drivers with 5 grooves, place the club sticker 1 inch from the toe and on the 3rd groove.

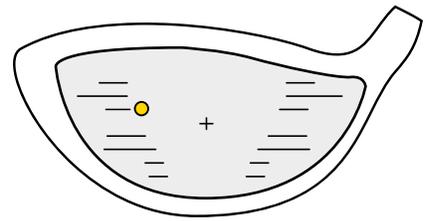


FAIRWAY WOODS / HYBRIDS

For woods and hybrids that have 5 grooves, the club sticker is placed 1 inch in from the toe and level with the 3rd groove.

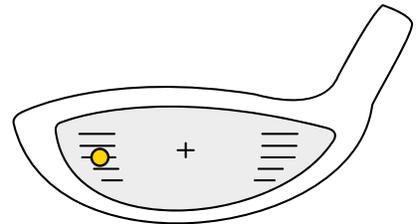

IRONS

Place the single club sticker on the toe side of the club face, 7 grooves up from the bottom of the club. Make sure the club sticker is on the smooth side of the face and not on the grooves.

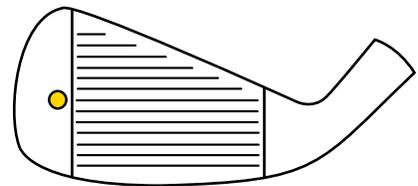

EYE MINI LITE

Technical Specifications

Model Name	EYE MINI LITE	Size	353mm (h) x 220mm (d) x 120mm (w) 13.9in (h) x 8.6in (d) x 4.7in (w)
Description	Compact Launch Monitor	Weight	8lbs / 3,63kg
Power	Adapter (Region Outlet)	Network	1Gbps, LAN (CAT 6), RJ-45 Connector
Certificate	KC, CE, FCC, VCCI	Sensor Position	Front
Sensor Location	Ground / Floor standing	Sensor Technology	High Speed Camera / Photometric Technology
Golf Ball Use	Any	Color	Black

Ball Data Points	Club Data Points
Ball Speed Driver/Iron: 11mph – 223mph Putter: 0.22mph – 67mph Ball Flight Type Carry Angle of Descent Side Spin Back Spin (Up to 12,000rpm) Side Angle Side Total Launch Angle Driver: -5° ~ 50° Iron: 0.1° ~ 80° Apex (Peak Height) Distance to APEX Flight Time Run Total Distance Spin Axis	Club Speed Attack Angle Smash Factor Club Path Requires EYE MINI LITE Club Stickers



U UNEEKOR

TECHNICAL SUPPORT

We are always ready to help and support you in your Uneekor journey. For additional technical support, please visit <https://uneekor.com/support> or reach out to one of our Technical Support heroes at support@uneekor.com or Phone: +1 (888) 262-6498

OPERATING HOURS

Monday – Friday 8:00am – 8:00pm EST
Saturday – Sunday 8:00am – 5:00pm EST

Visit uneekor.com for more information